

CRAFT DISTON

Biscayne Series Hinged Shower Enclosure

INSTALLATION INSTRUCTIONS

Model Numbers

SHOWER ENCLOSURE
780M

Hinge door with (1) in-line panel
and (1) 90° panel


To install your shower enclosure, you will need the following:

- level
- 3/32", 1/8" and 3/16" drill bits
- phillips screwdriver
- sealant

GLAZED
includes glass

KD
does not
include glass


NOTE: K.D. units include all metal parts and hardware, but do not include glass. Glass size equals frame size less 1 1/2" in height and width.

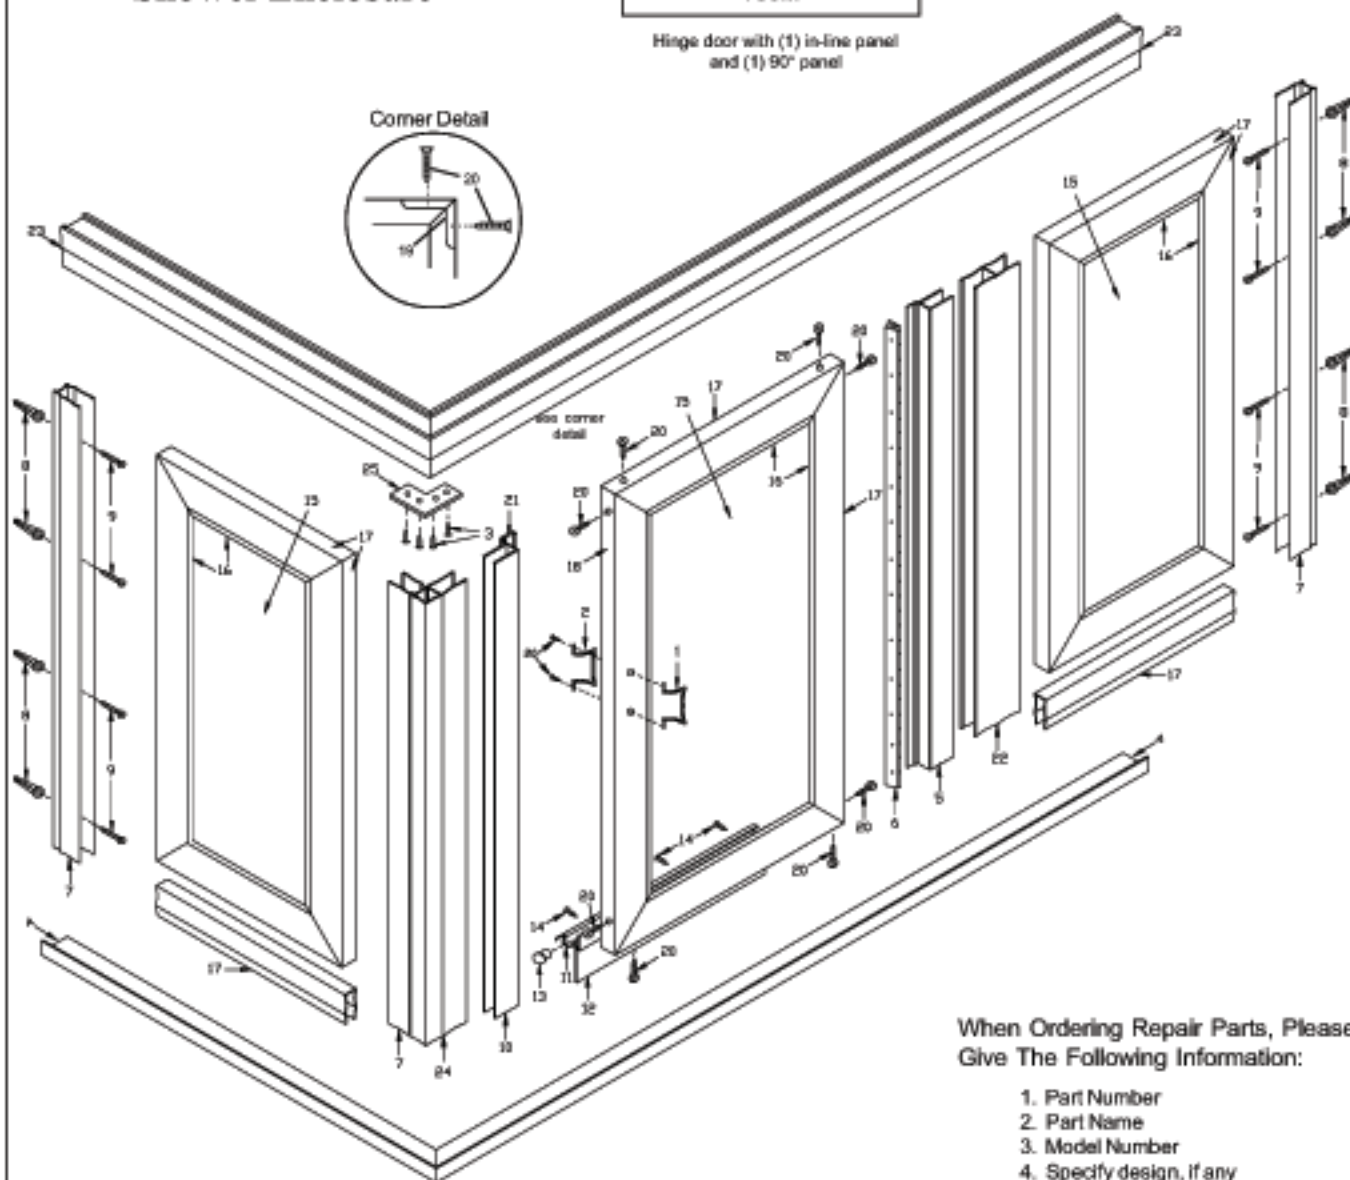

Description	Qty.	Part #	
1. Outside (male) door handle	1	8153	
2. Inside (female) door handle	1	8149	
3. #8 x 1/2" PH SMS	4	306	
4. Thresholds	2	SSI-113	
5. Hinge jamb	1	SSI-88	
6. Hinge	1	675	
7. Wall channels	3	SSI-97	
8. Wall anchors	8	NO240	
9. #8 x 1" PH SMS	8	300	
10. Strike jamb	1	SSI-141	
11. Drip channel	1	CFM-49	
12. Drip channel vinyl	1	V1596	
13. Drip channel plug	1	NO312	
14. #6 x 3/8" PH SMS	30	205	
15. Tempered glass (glass units)	3		
16. Glazing vinyl	40 ft.		
17. Glass frames	13	SSI-76	
18. Magnetic door frame	1	SSI-140	
19. Corner brackets	12	SS252	
20. #8-32 x 1/2" FH MS	26	301	
21. Magnetic strip	1	M-1354	
22. H mulion	1	SSI-85	
23. Headers	2	SSI-44	
24. Corner post	1	SSI-91	
25. 90° header bracket	1	PP250	

When Ordering Repair Parts, Please Give The Following Information:

1. Part Number
2. Part Name
3. Model Number
4. Specify design, if any

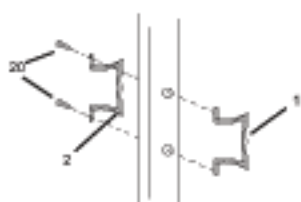


Step 1

Assemble door handles


MODEL 780M TR
with tile rise

- attach outside (male) door handle (1) and inside (female) door handle (2) to door with two #8-32 x 1/2" flat head machine screws (20).
- set door assembly aside. (The inside door handle should be placed on the magnet side of the door.)

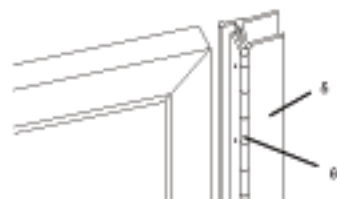


Step 2

- this door is reversible and can swing to the right or left. (A right-swing door is shown.) Decide which way you wish your door to swing.

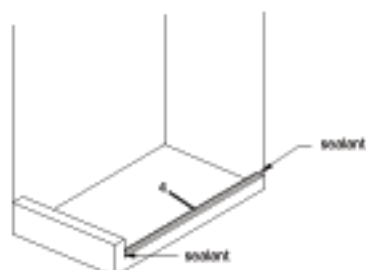


Step 3

- measure curb from wall to tile rise.
- cut bottom threshold (4) 1/16" less than opening width.
- position assembled thresholds on curb and mark its position.

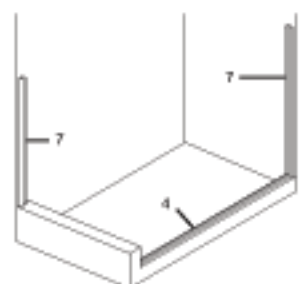


Step 4

- position wall channels (7) on threshold (4).
- plumb wall channels and mark installation holes on wall.
- remove wall channels.
- for ceramic tile installation, use a 3/16" masonry bit for drilling installation holes and install plastic wall anchors (8).
- for fiber glass installation, use a 1/8" drill bit for drilling installation holes.

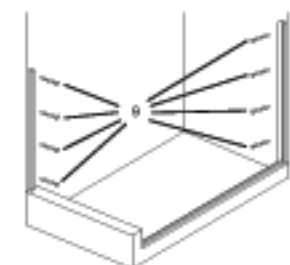


Step 5

- remove threshold assembly and build up sealant on each end of curb under threshold location.
- replace threshold assembly to previous location.
- replace wall channels (7) in previous location.
- secure wall channels to wall with #8 x 1" truss head sheet metal screws (9).
- apply a liberal amount of sealant on inside of wall channels where wall channels meet thresholds.

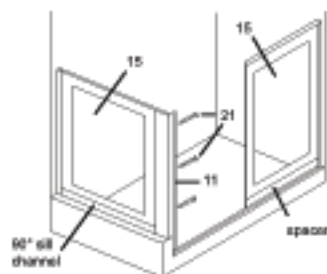


Step 6

- place stationary glass panels (15) into wall channels. Do not secure.
- install 90° post (24) on glass panel.
- place strike jamb (10) into 90° post.
- place H mullion (22) onto in-line glass panel.

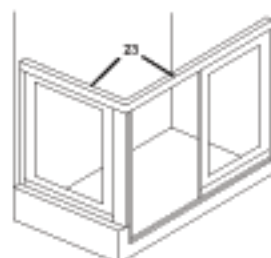


Step 7

- from long point of miter add 1 1/8" to centerline measurement (plus or minus wall variance) and cut headers (23) to size.
- Note:** Door and panel headers are sent from the factory in longer lengths than center line measurements.
- assemble headers using 90° bracket and #6 x 1/2" pan head sheet metal screws (3).
- place headers over wall channels and 90° post.

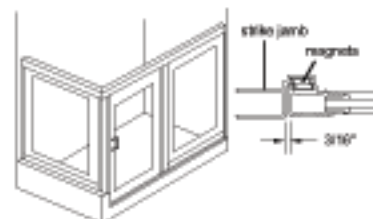

Step 8

- place door hinge jamb (5 & 6) into H mullion (22).
- close door against strike jamb (10) making sure door is flush against strike jamb.
- adjust door to opening.
- secure hinge and strike jamb to post and H mullion by drilling 3/32" holes and using #6 x 3/8" pan head sheet metal screws (14).
- secure glass panel to wall channel, sill channel and 90° post by drilling 3/32" holes and using #6 x 3/8" pan head sheet metal screws.
- secure header to wall channels and 90° post by drilling 3/32" holes and using #6 x 3/8" pan head screws (14).
- NOTE:** If magnet does not pull door shut, reverse strike jamb magnet. Groove in magnets should NOT match.

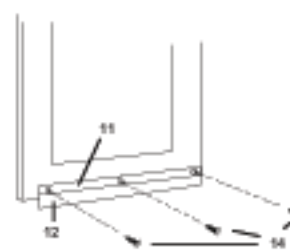

Step 9

- cut drip channel (11) 1/4" less than panel width.
- notch drip channel 3/4" at hinge side to allow channel to overlap hinge jamb.
- using a file, round off both lower corners of drip channel.
- insert drip channel vinyl (12) into drip channel (11) and trim to size.
- insert plastic drip channel plug (13) into end of drip channel.
- with door closed, position drip channel on inside of door with a slope to the hinge side.
- mark the location.
- drill three 3/32" holes from drip channel into door.
- secure with three #6 x 3/8" pan head machine screws (14).
- IMPORTANT:** holes must be drilled a minimum of 3/16" below exposed glass.

Step 10

- seal the inside and outside of the unit at any point unit meets wall or curb. Seal between outside of bottom spacer and high side of threshold.