

CRAFT DISTON

Series 401-TR Hinged Shower Enclosure With Tile Rise

SPECIFICATIONS:

General: All aluminum enclosures shall be series No. 401-TR as manufactured by Craft Fabricators, Ft. Scott, KS.


MATERIALS AND CONSTRUCTION:

Aluminum extrusions to be of 6063 T-6 alloy. All screws to be stainless steel.

FINISH:

Silver - Polished Bright Dip Anodized.
Gold - Polished Bright Dip Gold Anodized

corner detail

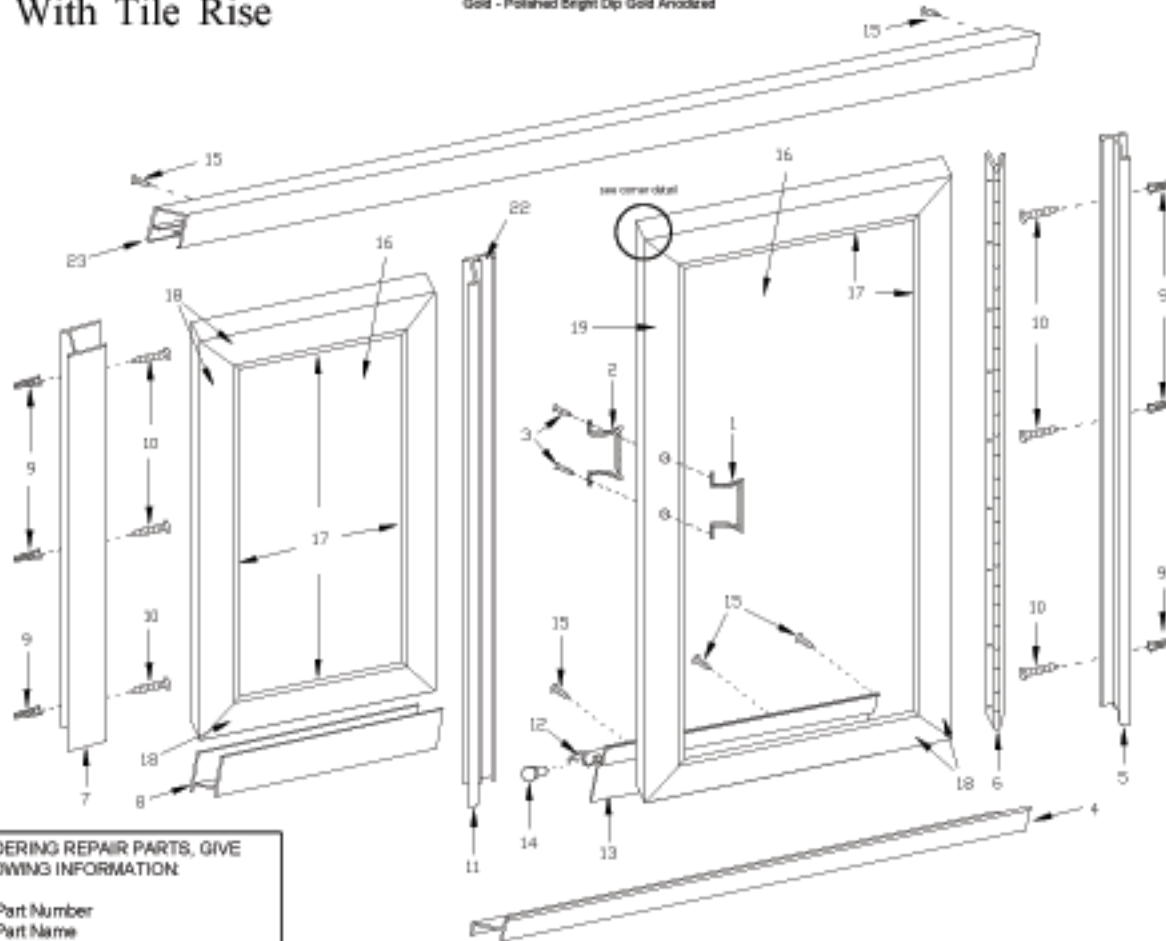

To install your shower enclosure, you will need the following:

- level
- 3/32", 1/8" and 3/16" drill bits
- phillips screwdriver
- sealant

DESCRIPTION	QTY.	PART #	
1. Outside (male) door handle	1	VPC-125	
2. Inside (female) door handle	1	VPC-125	
3. #6-32 x 5/8" flat head machine screws	2		
4. Threshold	1	CFM-70	
5. Standard hinge jamb	1	CFM-5	
6. Hinge	1		
7. Wall channels	2	CFM-63	
8. Sill channel	1	CFM-63	
9. Wall anchors	8		
10. #5 x 1 1/2" truss head sheet metal screws	8		
11. Strike jamb	1	CFM-84	
12. Drip channel	1	CFM-49	
13. Drip channel vinyl	1	900	
14. Drip channel plug	1	62M9012	
15. #6 x 3/8" pan head sheet metal screws	10		
16. Tempered glass (glass units)	2	998	
17. Glazing vinyl	32 ft.	919	
18. Glass frames	7	CFM-1	
19. Magnetic glass frame	1	CFM-83	
20. Corner angles	8	193-1-1	
21. #8-32 x 1/2" flat head machine screws	16	301	
22. Magnetic strip	1	M-225	
23. Header	1	CFM-34	
24. #8 x 1" truss head sheet metal screw	2		


WHEN ORDERING REPAIR PARTS, GIVE THE FOLLOWING INFORMATION:

1. Part Number
2. Part Name
3. Model Number
4. Specify design, if any

Step 1


Assemble door handles

SERIES 401H-TR
with tile rise

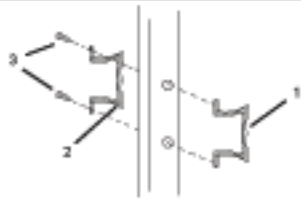


- attach outside (male) door handle (1) and inside (female) door handle (2) to door with two #6-32 x 5/8" flat head machine screws (3).
- set door assembly aside. (The inside door handle should be placed on the magnet side of the door.)

Step 2

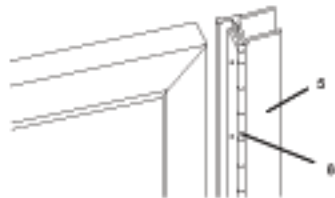


- this door is reversible and can swing to the right or left. (A right-swing door is shown.) Decide which way you wish your door to swing.

Step 3

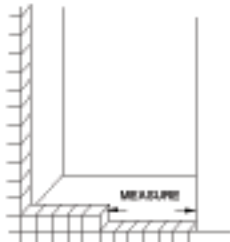


- measure curb from wall to tile rise for swing door opening.
 - cut bottom threshold (4) 1/16" less than opening width.
- Note:** Make sure high side of threshold is to the outside of shower.

Step 4

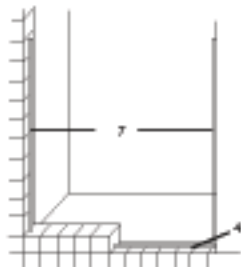


- position wall channels (7) on threshold (4), making sure threshold is centered on curb.
- plumb wall channels and mark installation holes on wall.
- remove all parts.
- for ceramic tile installation, use a 3/16" masonry bit for drilling installation holes.
- install plastic wall anchors (8).
- for fiberglass installation, use a 1/8" drill bit for drilling installation holes.

Step 5

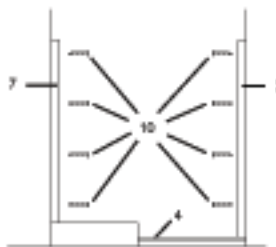

- place a bead of sealant on each end of curb under threshold location.
- replace threshold (4) on center of curb.
- replace wall jamba (7) in previous location.
- secure wall channels to wall with three #8 x 1 1/2" truss head sheet metal screws (10).

Step 6

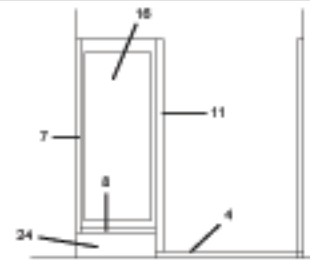


- cut sill channel (8) 3/4" less than panel width.
- secure sill channel to tile rise with screws or sealant.
- set glass panel (16) into wall channel (7) and sill channel. Do not secure.
- attach strike jamb (11) to stationary glass panel using #5 x 1/2" flat head undercut screws and to tile rise (24) with one #5 x 1 1/2" flat head sheet metal screw.

Step 7




- position door on opposite wall.
- close door against strike jamb making sure door is flush against jamb.
- measure the wall to wall opening across top of unit.
- cut header (23) 1/16" less than opening.
- place header over wall channels.

Step 8

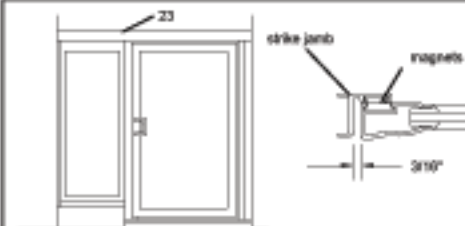

- adjust unit to opening.
 - drill 3/32" holes in back of adjustable hinge jamb (5) and into wall channel (7).
 - secure using three #8 x 3/8" pan head sheet metal screws.
- NOTE:** If magnet does not pull door shut, reverse strike jamb magnet. Groove in magnets should match.

Step 9

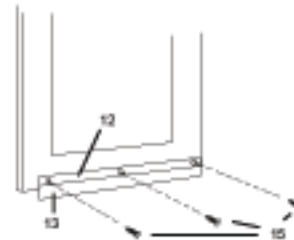

- cut drip channel (12) 1/4" less than panel width.
 - notch drip channel 3/4" at hinge side to allow channel to overlap hinge jamb.
 - using a file, round off both lower corners of drip channel.
 - insert drip channel vinyl (13) into drip channel (12) and trim to size.
 - insert plastic drip channel plug (14) into end of drip channel.
 - with door closed, position drip channel on inside of door with a slope to the hinge side.
 - mark the location, then clean door thoroughly with rubbing alcohol.
 - peel protective cover off double face tape and install drip channel.
 - for additional security, drill three 3/32" holes from drip channel into door.
 - secure with three #6 x 3/8" pan head machine screws (15).
- IMPORTANT:** holes must be drilled a minimum of 3/8" below exposed glass.

Step 10

- seal the inside and outside of the unit at any point unit meets wall or curb. Seal between outside of sill channel and high side of threshold.